

Encoding Transmitter: Compact 2

USE SECTION 1 IF YOU HAVE A REMOTE CONTROL WHICH WILL OPERATE THE COMPACT 2 (YOU ARE PROGRAMMING IN AN ADDITIONAL REMOTE CONTROL)

SECTION 1

- 1. Ensure the alarm is disarmed & the motorcycle ignition switch is off
- 2. Ensure the alarm purple wire is separate not connected to anything
- 3. Connect the alarm green wire to the green/purple wire
- 4. Connect (3) above to the motorcycle battery positive
- 5. Switch on the motorcycle ignition
- 6. Press the new remote once you should hear one beep from the compact 2
- 7. Wait 5 seconds
- 8. Press the new remote once you should hear two beeps from the compact 2
- 9. Switch off the motorcycle ignition and remove the wires from the battery positive.
- 10. Test. If the unit has failed to programme, you will need to repeat the process twice more. Return alarm wires to original state.

USE SECTION 2 IF YOU DO NOT HAVE A REMOTE CONTROL WHICH WILL OPERATE THE COMPACT 2 (SUCH AS YOU HAVE LOST THE ORIGINAL AND ARE PROGRAMMING IN A NEW REMOTE)

SECTION 2

- 1. Ensure the motorcycle ignition switch is off and the alarm in- line fuse is removed.
- 2. Ensure the alarm purple wire is separate not connected to anything
- 3. Connect the alarm green wire to the green/purple wire
- 4. Connect (3) above to the motorcycle battery positive
- 5. Switch on the motorcycle ignition and then replace the alarm in-line fuse
- 6. Press the new remote once you should hear one beep from the compact 2
- 7. Wait 5 seconds
- 8. Press the new remote once you should hear two beeps from the compact 2
- 9. Switch off the motorcycle ignition and remove the wires from the battery positive.
- 10. Test. If the unit has not programmed, you will need to repeat this process twice more. Return alarm wires to original state.

