



Introducing and removing new remote controls to the M357I

N.B. All remote controls must be pre-coded to the number issued on the orange card supplied with the alarm. The override pin-code from the card is also required to access the programming routine. Please ensure you have these details before commencing.

1. Disarm the system either by remote control or override code.
2. Within 10s turn on the ignition 3 times and keep it on (beep on third activation).
3. Turn the ignition off within 10s.
4. Enter the override code from the Orange code card.
5. Leave the ignition on when you have entered the fifth digit of the override code.
6. The buzzer will confirm the correct entering of the code by the signal (bip-bip-bop-bop).
7. Transmit once with the new remote control to be enabled (LED lit on).
8. Transmit a second time with the same remote control for confirmation (confirmation beep). If the system emits a "boop" the operation was wrong; repeat the operation.
9. Now the new remote control is enabled and meanwhile all those previously stored in the memory are disabled.
10. Carry out, now, as above described, the double transmission of all other remote controls to be enabled (including the originals).
11. Turn the ignition off. The system indicates that the programming is over by the signal (bip-bip-bop-bop).
12. The LED will emit the same number of flashes as the number of remote control enabled.